



# TUG VIEW

INSTALLATION GUIDE




## PARTS LIST

- Knob
- Mount
- Knob Bolt
- Mount Bolt

## TOOL LIST

- 3mm Allen Wrench
- 5/8" Wrench

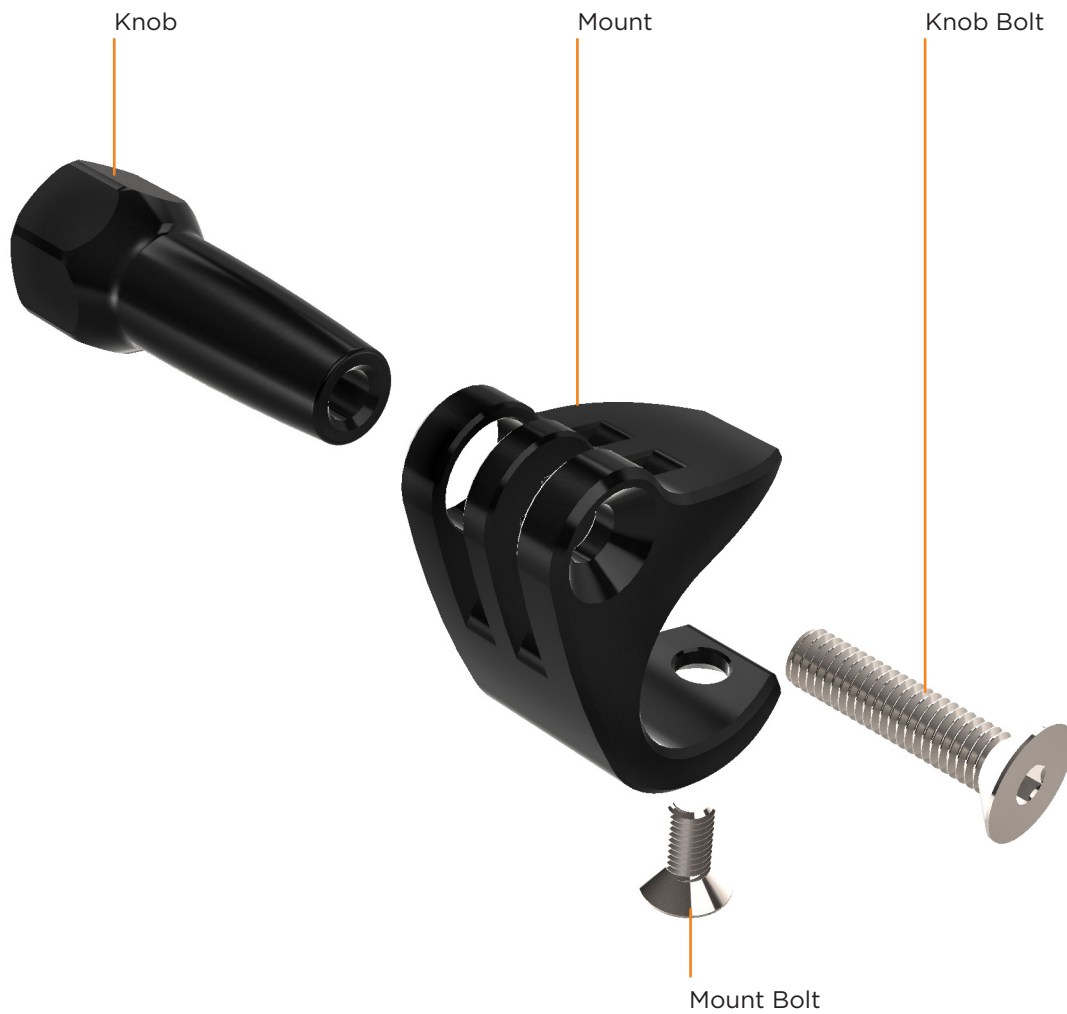



## INSTALLATION GUIDE

1 Slip the Mount over the front of the tow hook adapter.

2 Use a 3mm allen wrench to tighten the mount bolt into the bottom of the adapter. Make sure the allen wrench has good engagement with the hex in the mount bolt when tightening.

3 Remove the Knob and Knob Bolt.

4 Pass the ears of the GoPro case into the Mount. Put the Knob bolt through the holes of the Mount and thread the Knob onto the Knob Bolt.

5 Adjust the GoPro's angle and tighten the Knob with a 5/8" wrench.

6 Enjoy your new Tug View footage!



**NEED TECH HELP?**

[tech@raceseng.com](mailto:tech@raceseng.com)